

# VIGIL I REPAIR & MAINTENANCE PROCEDURE FOR PARACHUTE RIGGERS & APPROVED SERVICE CENTERS

## ① POWER PACK REPLACEMENT:

- › Switch off the Vigil
- › Remove the hologram (Vigil seal from the main box) and clean the rest of the previous hologram.
- › Open the main box with the hexagonal key
- › Disconnect the old power pack
- › Connect the new power pack
- › Close the main box with the hexagonal key
- › Seal the hole of the screw (pict 2) with the delivered reserve Q.C. hologram on the service card (silver with red numbers). The number on the seal must be the same as the one on the new power pack and the service card (pict 1).

Pict 1




Pict 2



## ② CUTTER UNIT REPLACEMENT:

- › Switch off the Vigil
- › Remove the hologram (Vigil seal from the main box) and clean the rest of the previous hologram.
- › Open the main box with the hexagonal key
- › Partially unscrew the printed circuit board fixing screw → 3 turns to the left (pict 3)
- › Unplug the old cutter unit. You need first to lift about (2 - 3 mm)
- › Plug in the new cutter unit
- › Tighten the printed circuit board fixing screw → 3 turns to the right (pict 3)
- › Close the main box with the hexagonal key
- › Seal the hole of the screw (pict 2) with the delivered reserve Q.C. hologram on the service card (silver with red numbers). The number on the seal must be the same as the one on the new cutter unit (pict 4) and the service card.

Pict 3

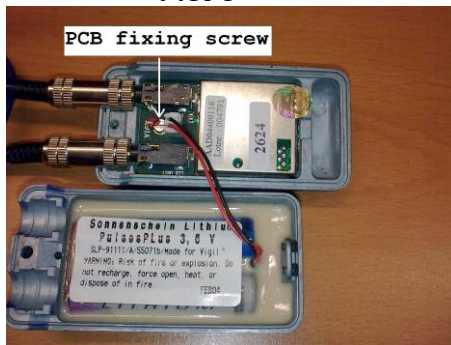

Pict 4



### ③ CONTROL UNIT REPLACEMENT:

- › Switch off the Vigil
- › Remove the hologram (Vigil seal from the main box) and clean the rest of the previous hologram.
- › Open the main box with the hexagonal key
- › Partially unscrew the printed circuit board fixing screw → 3 turns to the left (pict 3)
- › Unplug the old control unit. You need to lift about (2 - 3 mm) and then pull on the jack.
- › Plug in the new control unit
- › Tighten the printed circuit board fixing screw → 3 turns to the right (pict 3)
- › Close the main box with the hexagonal key
- › Seal the hole of the screw (pict2)with the delivered reserve Q.C. hologram on the service card (silver with red numbers). The number on the seal must be the same as the one on the new control unit (pict 5) and the service card.

**Pict 5**

